

Contents

EXTERNAL SHIFT MECHANISM.	57
KICKSTARTER SPRING.....	58
BREATHER COVER.....	59
ENGINE OIL PUMP	60
TRANSMISSION	61
KICKSTARTER	73
OIL PRESSURE RELIEF VALVE	74
BALANCER MECHANISM.	75
CRANKSHAFT, CAMSHAFT CHAIN, AND PRIMARY CHAIN	77
CONNECTING ROD	78
CAMSHAFT CHAIN GUIDE (Front)	79
CAMSHAFT CHAIN GUIDE (Rear)	79
CAMSHAFT CHAIN GUIDE (Top)	79
FRONT WHEEL.....	79
FRONT DISC BRAKE.	82
REAR WHEEL.....	87
REAR DISC BRAKE	90
TIRE AND TUBE	93
RIM	94
SPOKE	94
CLUTCH CABLE	94
THROTTLE CABLES	95
HANDLEBAR	96
SPEEDOMETER CABLE	97
TACHOMETER CABLE	97
HEADLIGHT UNIT.	98
SPEEDOMETER, TACHOMETER, AND ILLUMINATOR LIGHTS.	98
INDICATOR LIGHTS	99
IGNITION SWITCH.....	100
TURN SIGNAL LIGHT	100
TURN SIGNAL ASSEMBLY.	100
TAIL/BRAKE LIGHT	102
OIL PRESSURE INDICATOR SWITCH	102
FRONT BRAKE LIGHT SWITCH	102
FRONT FORK.	102
STEERING STEM.	105
STEERING STEM BEARING	107
REAR SHOCK ABSORBERS	108
SWING ARM	109
DRIVE CHAIN.....	111
MAINTENANCE & THEORY OF OPERATION	112
AIR CLEANER	112
CARBURETORS	112