

TABLE OF CONTENTS 3

VALVE ADJUSTMENT CHART 199
VALVE INSTALLED HEIGHT
 PROCEDURE TABLE 200
TORQUE AND PARTS REQUIRING
 USE OF A NON-PERMANENT
 LOCKING AGENT 201
TROUBLESHOOTING 204
FLOW CHART FOR DISASSEMBLY. 208
WIRING DIAGRAM 213
INDEX 215