





•Pull out the spring guide, and remove the kick spring.

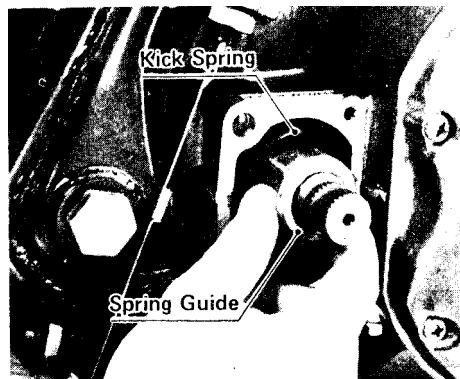

BREATH ER COVER Removal :


•Remove the breather pipe from the breather cover bolt.

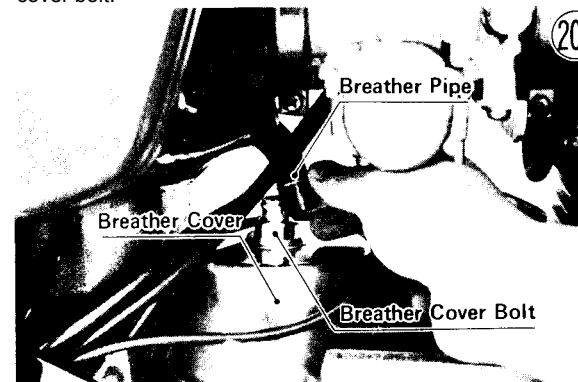

Installation Notes:

1. To install the kick spring, turn the kick shaft all the way clockwise, insert one end of the spring into the crankcase hole, insert the other end into the kick shaft using needle nose pliers, and, while holding the spring in place if necessary, insert the kick spring guide.

- Remove the breather cover bolt and O ring, and take off the breather cover and O ring.
- Remove the breather plate screws (2), and remove the breather plate with the breather tubes.

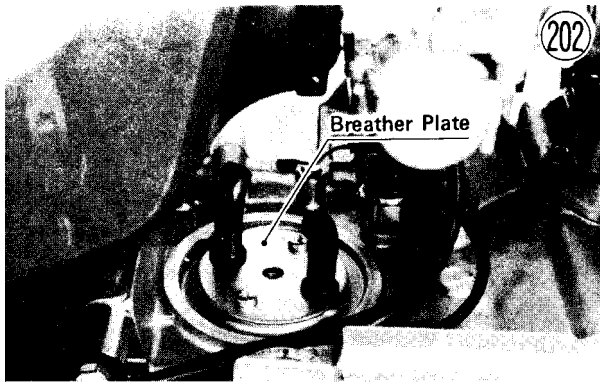

2. Using a new kickstarter cover gasket, fit the kickstarter cover onto the crankcase. Use the kick shaft oil seal guide (special tool) to protect the kick shaft oil seal. Tighten the screws (4) firmly.

Installation Notes:

1. Replace the breather cover O ring, or breather cover bolt O ring with a new one if deteriorated or damaged.
2. If the baffle plate is removed, apply a non-permanent locking agent on the plate mounting bolt threads, and