


KICKSTARTER

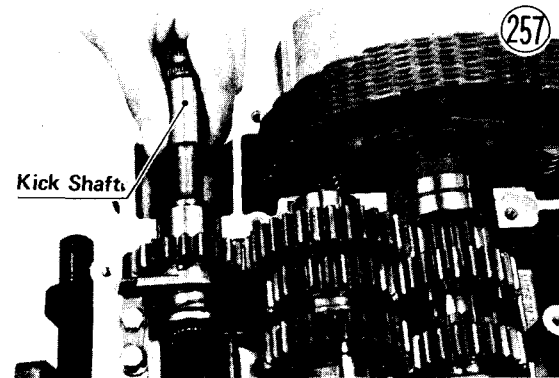

Removal:

- Split the crankcase as explained in transmission removal (Pg. 60). The transmission itself does not require removal.
- Remove the kick shaft from the upper crankcase half.

Kickstarter

13. Ratchet Gear
14. Circlip
15. Washer
16. Kick Gear
17. Washer
18. Bushing
19. Circlip
20. Kick Shaft
21. Spring Guide
22. Kick Spring
23. Stopper Bolt
24. Lock Washer
25. Stopper

