


DISASSEMBLY 81

288

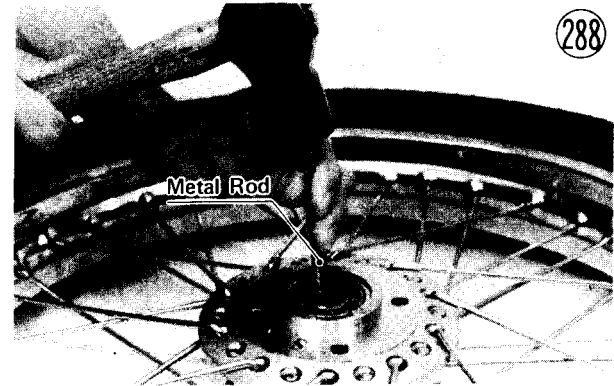

•Insert a metal rod into the hub from the speedometer gear side, and remove the bearing 18 on the right side by tapping evenly around the bearing inner race. The distance collar 16 will come out with the bearing.

•Insert the metal rod into the hub from the right side, and remove the other bearing 15 by tapping evenly around the bearing inner race.

Front Hub

