

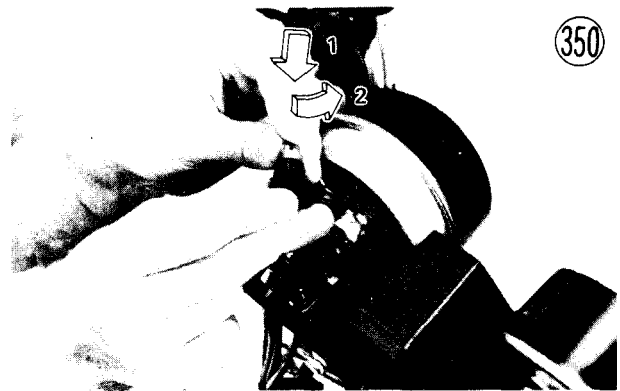
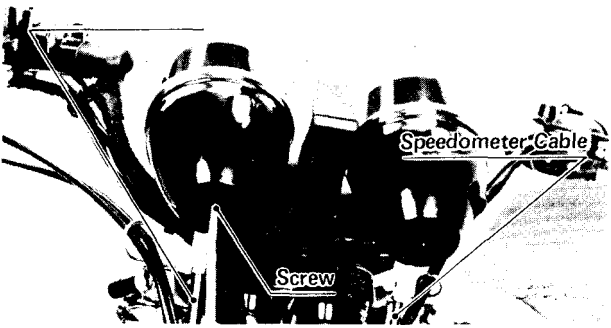


tachometer Cable

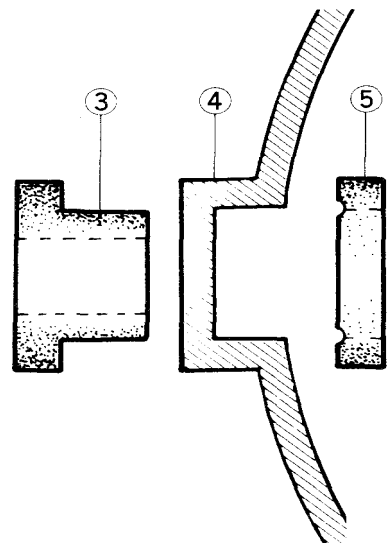

•Remove the nuts, lock washers, flat washers, dampers, and collars (2 ea) from the bottom of the meter holder.

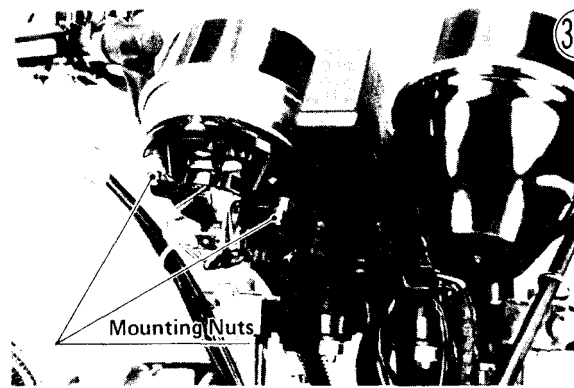

- Pull up on the front of the meter, and pull out the illuminator lights (2) from their base to complete meter removal.
- To remove the illuminator bulb, first press the bulb inwards, then holding the bulb in this position, twist it to the left and pull it out.

Headlight Housing Installation

Installation Notes:

1. Use 12V 3.4W bulbs for illuminator light replacement.
2. If the headlight housing dampers have been removed, install the dampers as illustrated in Fig. 352.
3. Carry out the vertical headlight adjustment after installation (Pg. 21).

INDICATOR LIGHTS (Neutral, High Beam, Oil, Stop Lamp, Left and Right Turn)

Removal:

- Remove the ignition switch mounting nut and take off the upper switch cover.