

## 100 DISASSEMBLY

- Remove the indicator lights (5) the same way as illuminator light removal (Fig. 250).

### Installation Notes:

1. Use the bulbs shown in Table 7 for indicator light replacement. Also, refer to the table for light location by lead color. Example: The right turn signal socket takes the bulb with Black/Yellow gray wire.

**Table 7 Indicator Lights**


Bulb Wattage	Indicator Lights	Lead Color
12V	Neutral	Green/Red, Brown
	High Beam	Black/Yellow, Red/Black
	Oil	Blue/Red, Brown
	Stop Lamp	Green/White, Brown
	Left Turn Signal	Black/Yellow, Green
	Right Turn Signal	Black/Yellow, Gray

2. Adjust the headlight vertically (Pg. 21).


## IGNITION SWITCH

### Removal:

- Take out the retaining screws (2), pull the bottom of the headlight unit out of its housing, and swing the unit out from the housing.
- Disconnect the headlight socket from the rear of the unit.
- Loosen the mounting bolts underneath the headlight housing.
- Disconnect the ignition switch wiring harness socket from the plug (4-pin) it connects to in the headlight housing, and push the socket out of the housing.
- Take out the headlight housing mounting bolts (2) and move the housing down slightly. Each bolt has a nut, lock washer, and flat washer.
- Take out the screws and lock washers (3 ea) from the bottom of the indicator light panel, and remove the lower cover.

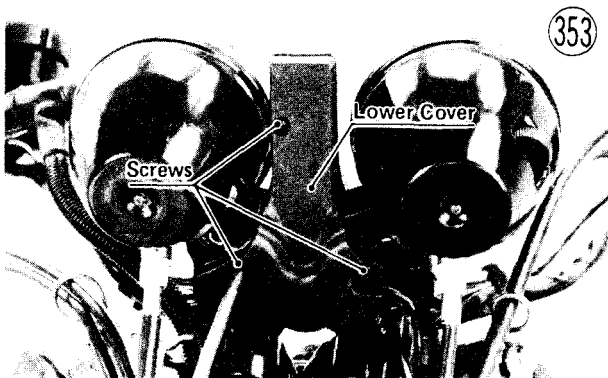

- Unscrew the ignition switch mounting nut, and pull out the ignition switch holder and ignition switch.

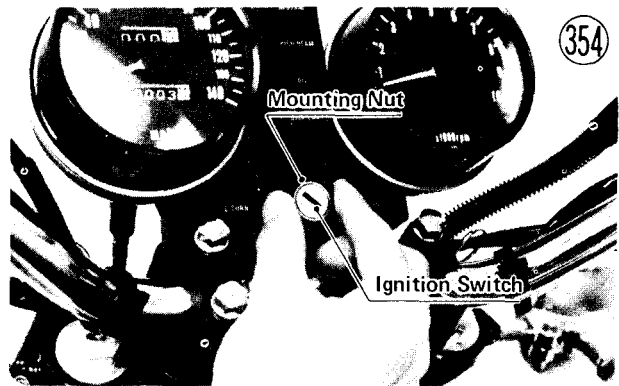

### Installation:

- Fit the ignition switch and its holder in place, and screw the ignition switch mounting nut onto the switch.
- Install the lower cover and tighten the screws (3). Each screw has a lock washer.
- Connect the ignition switch wiring harness socket to its plug in the headlight housing.
- Mount the headlight housing in place and tighten its mounting bolts. The sequence is: mounting bolt, flat washer, fork cover, rubber damper, headlight housing, rubber damper, housing insert, lock washer and nut (Fig. 352^).
- Connect the headlight plug to the headlight, fit the headlight into the housing, and tighten its retaining screws.
- Adjust the headlight vertically (Pg. 21).

## TURN SIGNAL LIGHT (Burn out Replacement)

- Remove the lens mounting screws, and take off the lens.
- Press the bulb inwards, and holding the bulb in this position, twist it to the left and pull it out.
- Install a new 12 volt bulb of the correct wattage (see the wiring diagram).
- Fit the rubber gasket in place, if removed, and install the lens. Be careful not to over tighten the mounting screws.

## TURN SIGNAL ASSEMBLY

### Removal (front, either side):

- Take out the retaining screws (2), pull the bottom of the headlight unit out of its housing, and swing the unit out from the housing.
- Disconnect the headlight socket from the rear of the unit.
- Disconnect the turn signal gray lead in the headlight housing.
- Loosen the mounting bolts (2) underneath the headlight housing.
- Take out the headlight housing mounting bolts (2) and move the housing down slightly.
- Remove the nut and pull the front turn signal from the front fork cover stay.