

3. Install the torque link and tighten the torque link nut with 2.6 ~ 3.5 kg-m (19.0-25 ft-lbs) of torque, insert a new cotter pin and bend both ends.
4. Adjust the drive chain (Pg. 17) after installing the swing arm.

DRIVE CHAIN

Removal:

WARNING The chain must not be cut for installation, as this may result in subsequent chain failure and loss of control.

- Remove the mufflers (Pg. 32).
- Remove the rear wheel (Pg. 87).
- Remove the swing arm (Pg. 109).
- Remove the engine sprocket (Pg. 55) and take off the chain.

Installation:

- Install the engine sprocket (Pg. 55).
- Install the swing arm (Pg. 109).
- Install the rear wheel (Pg. 87).
- Install the muffler (Pg. 32).
- Adjust the drive chain (Pg. 17).