

## PERIODIC MAINTENANCE CHART

Operation	Frequency	After initial 800 km	After initial 3,000 km	Every subsequent 3,000 km	Every subsequent 6,000 km	See Page
Change engine oil		•	•	•		196
Replace oil filter element		•	•		•	149
Adjust brakes		•	•	•		18
Adjust drive chain		•	•	•		17
Check, adjust clutch		•	•	•		16,136
Check, adjust carburetors		•	•	•		14,112
Check, adjust throttle cables		•	•	•		13
Check spoke tightness and rim runout		•	•	•		153
Tighten nuts and bolts		•	•	•		—
Clean fuel system		•	•	•		196
Clean, set spark plugs		•	•	•		9
Adjust camshaft chain		•	•	•		11
Check steering play		•			•	19
Check valve clearance		•			•	12
Adjust points, check timing		•	•	•		9
Clean air cleaner element			•	•		112
Carry out general lubrication			•	•		197
Check tire wear			•	•		153
Check drive chain wear			•	•		155
Lubricate drive chain		Every 300 km				156
Check brake wear		Every 6,000 km				157
Check front fork oil level		Every 6,000 km				167
Change air cleaner element		Every 10,000 km or after cleaning 5 times				112
Change front fork oil		Every 10,000 km				167
Change brake fluid		Every year or 10,000 km				160
Regrease wheel bearings		Every 2 years or 20,000 km				154
Regrease speedometer gear housing		Every 2 years or 20,000 km				154
Lubricate steering stem bearings		Every 2 years or 20,000 km				163