

Air cleaner.....	112	• Front brake lever.....	18
Air cleaner element	30, 112	Front brake light switch	
Axle	154	Front disc brake	82
Balancer chain	136	Front fork.....	102, 164
Balancer chain guide	136	Front hub	80
Balancer chain tensioner.....	77	Front wheel	79
Balancer mechanism	75, 134	Fuel tank	32, 150
Balancer weight	76	General lubrication	197
Battery	176	Grease seal	154
Brake	18	Guide (Balancer chain).....	136
Brake fluid	160	Guide (Camshaft chain).....	
Brake light	102	Guide (Primary chain).....	
Brake light circuit.....	188		
Brake light switch	19	Handlebar.....	96
Breather cover	59	Headlight.....	21
		Headlight circuit	186
Cable (clutch)	94	Headlight unit	
Cable (Speedometer)	97	Horn	21, 191
Cable (Tachometer)	97		
Cable (Throttle)	13, 95	Ignition coil	
Caliper	83, 90	Ignition switch	100, 186
Camshaft	37, 119	Ignition system	178
Camshaft chain	11, 77, 121	Ignition timing	9
Camshaft chain guide (Front)	79	Illuminator light	98
Camshaft chain guide (Rear)	79	Indicator light	99
Camshaft chain guide (Top)	79		
Camshaft sprocket	40	Kickstarter.....	73,
Capacitor	52	Kickstarter spring	58
Carburetor	14, 33, 112		
Clutch	16, 136	Lubrication (Engine).....	145
Clutch cable	94	Lubrication (General)	197
Clutch hub	53		
Clutch plate	53	Muffler.....	32,
Clutch release	55		
Connecting rod	78, 131	Neutral indicator switch.....	56, 142
Contact breaker	51		
Crankshaft	77, 131	Oil breather	149
Cylinder block	43, 127	Oil filter.....	31, 149
Cylinder head	40, 122	Oil pressure indicator switch	
		Oil pressure relief valve	74
Disc brake (Front	82,	Oil pump	60, 148
disc brake rear.....		Oil seal (Engine).....	149
Drive chain	17, 111, 155	Oil seal (Valve stem)	127
Dynar	170	Overshift limiter.....	
Dv-	46		
	46	Pad	83, 90, 157
	48	Performance curve (Engine)	7
	23	Performance curve (Running).....	8
lubrication.....	145	Periodic maintenance	195
-oil	196	Piston.....	44,
imeoil seal	149	Piston ring	
Engine sprocket.....	55	Primary chain	77,
External shift mechanism.....	57		
		Rear brake pedal	18, 90
Flow chart (Engine removal).....	208	Rear disc brake	90
Flow chart (Engine disassembly).....	209	Rear hub	88
Flow chart (Engine component removal).....	210	Rear shock absorber	17, 108, 168
Flow chart (Frame component removal).....	211	Rear wheel	87
		Rectifier.....	173